


WARING COMMERCIAL®



Triple Head Electronic Drink Mixer WDM360TX

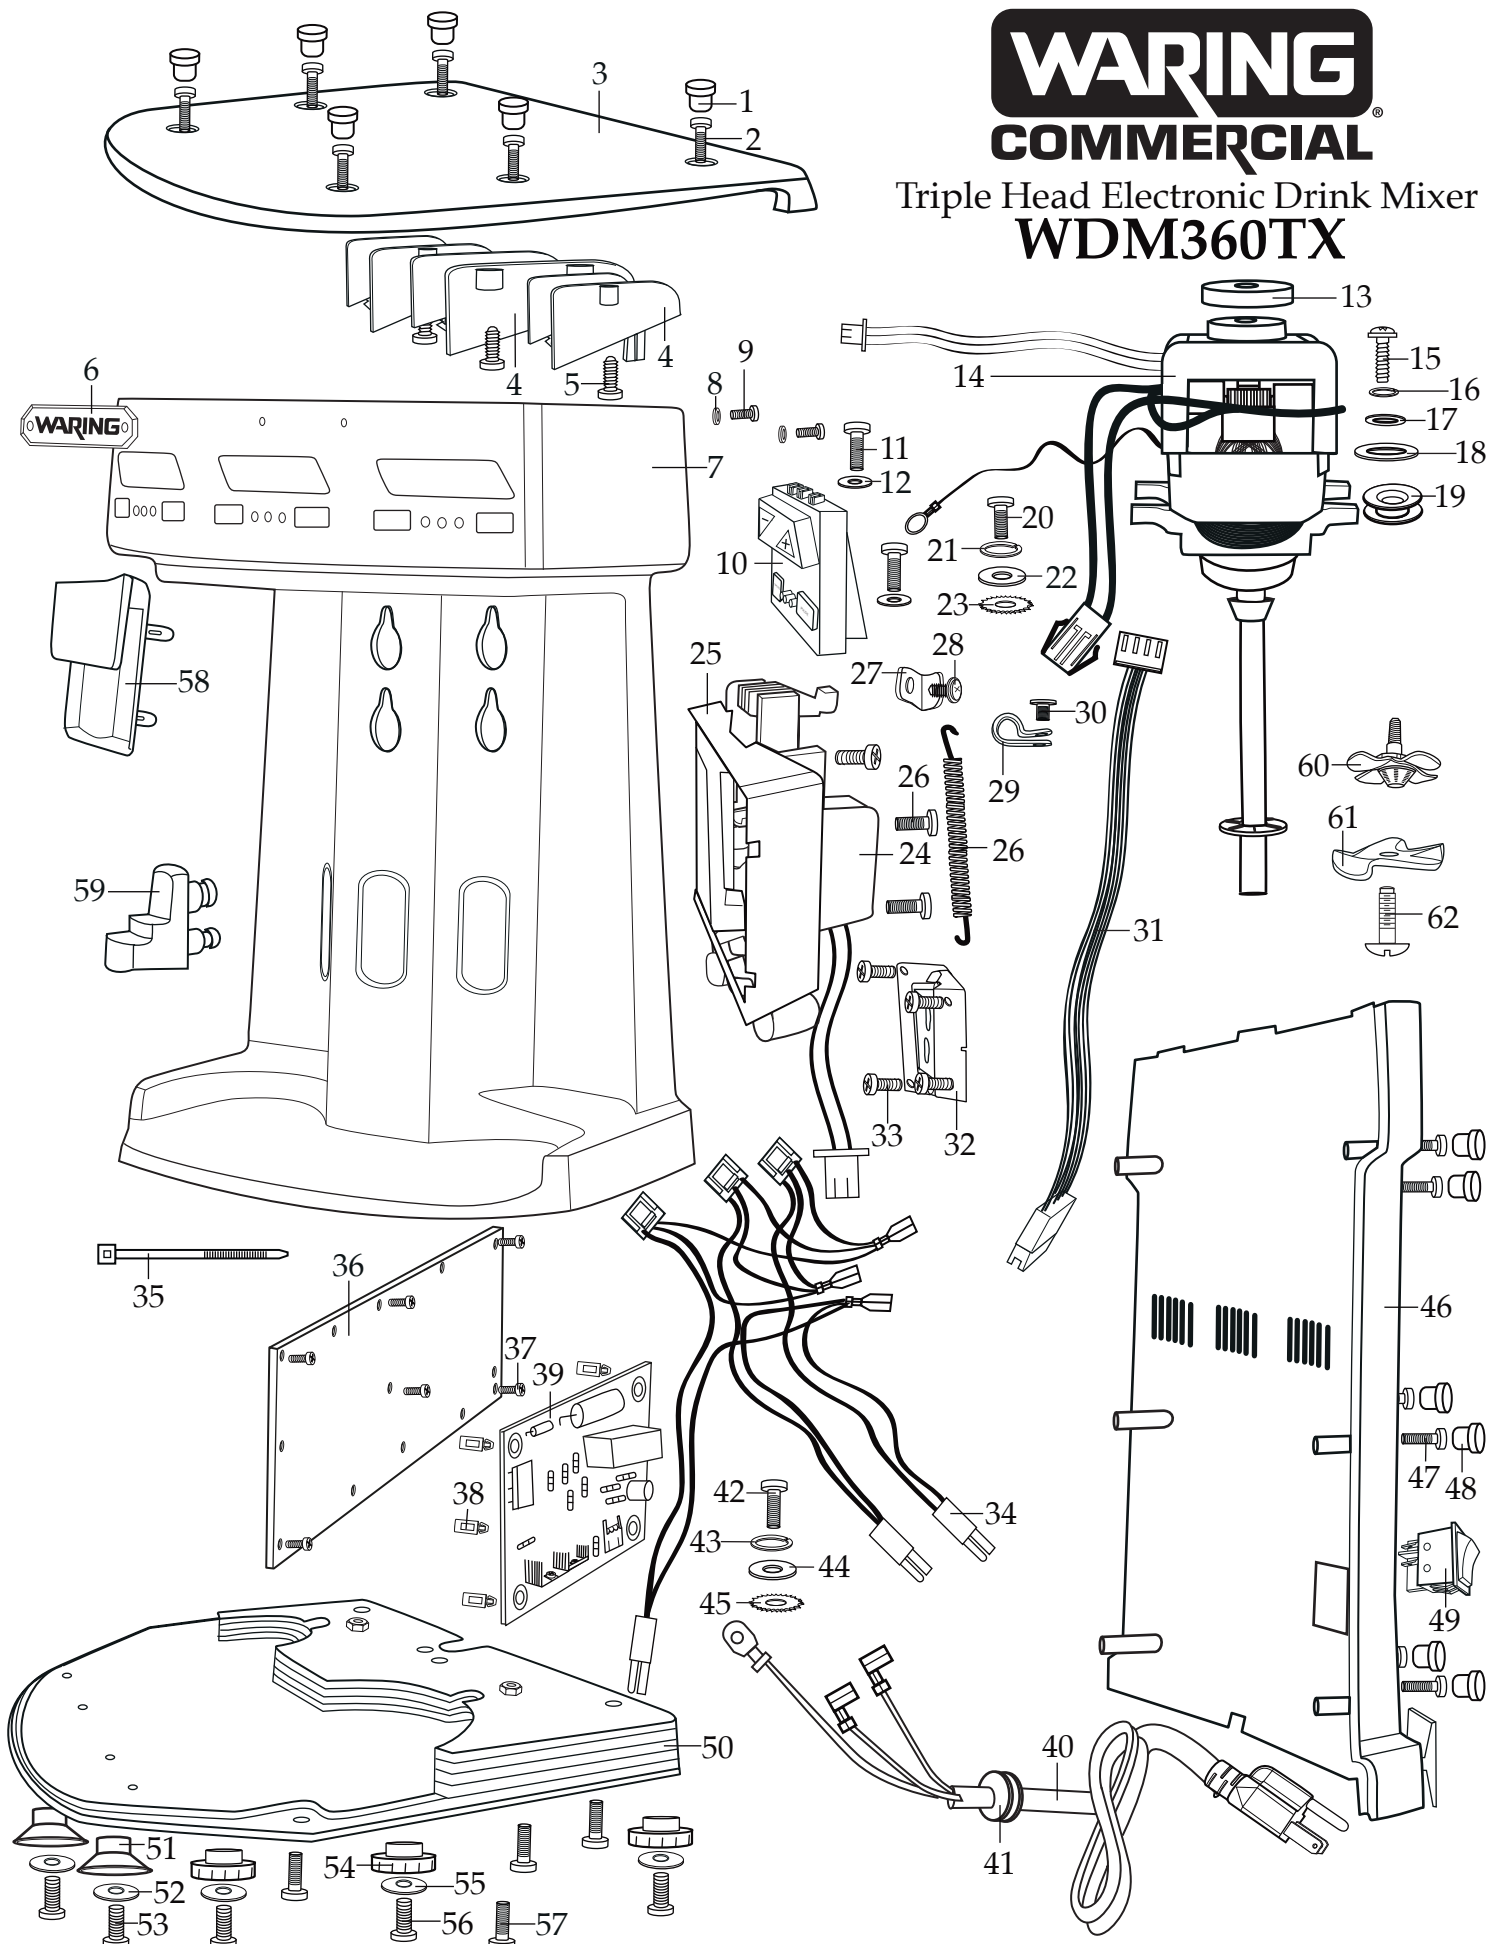


Illustration#	Part#	Description
1	037532	Hole Plugs (6 required)
2	033901	Screw (6 required)
3	037891	Top Cover with Air Guards
4	037126	Small Air Guards (2 required)
	037892	Large Air Guard
5	033886	Screw (2 required per small air guard) (4 required per large air guard)
6	030689	Name Plate
7	037893	Housing with Name Plate
8	030690	Washer (2 required)
9	030691	Screw (2 required)
10	037535	Control Panel (3 required)
11	030706	Screw (2 required per control panel)
12	037536	Fiber Washer (2 required per control panel)
13	030694	Top Motor Mount (1 per motor)
14	037547	Motor (3 required)
15	037548	Screw (2 required per motor)
16	030714	Spring Washer (2 required per motor)
17	030696	Washer (2 required per motor)
18	033697	Large Washer (2 required per motor)
19	037894	Side Motor Mounts (2 required per motor)
20	030706	Screw (1 required per motor)
21	030714	Spring Washer (1 required per motor)
22	037549	Washer (1 required per motor)
23	030707	Lock Washer (1 required per motor)
24	037648	Actuator Switch Assembly (3 required)
25	037649	Actuator Switch Bracket (2 required)
26	030706	Screw (3 required per actuator switch bracket)
27	037654	Bracket
28	037655	Screw
29	036039	Lead Clamp
30	037653	Screw
31	037540	Lead Tape (1 required per control panel)

Illustration#	Part#	Description
32	037650	Cup Support Locking Bracket (2 required)
33	030706	Screw (4 required per cup support locking bracket)
34	037895	Lead Harness
35	013791	Wire Ties (12 required)
36	037542	Power Board Holder (3 required)
37	037543	Screw (6 required for 2 power board holders) (3 required for 1 power board holder)
38	033881	Press Lock Stand Offs (4 required per power board)
39	037544	Power Board (3 required)
40	037551	Cord
41	031984	Strain Relief
42	033901	Screw (cord ground)
43	030714	Spring Washer
44	030696	Washer
45	030707	Lock Washer
46	037896	Back Plate
47	033901	Screw (6 required)
48	037532	Hole Plugs (6 required)
49	037553	On/Off Rocker Switch
50	037897	Bottom Plate with Weights and Feet
51	030719	Suction Cup Feet (2 required)
52	030696	Washer (2 required)
53	030706	Screw (2 required)
54	036046	Feet (4 required)
55	030696	Washer (4 required)
56	030706	Screw (4 required)
57	033901	Screw (4 required)
58	037555	Cup Actuator (3 required)
59	037556	Cup Support (3 required)
60	029292	Butterfly Agitator (3 required)
61	030716	Solid Disk Agitator (3 required)
62	029291	Screw (3 required)
63	037651	Cup Support Locking Assembly (3 required)
64	031981	Screw (2 required on left and right cup support locking assembly)


Looking into unit with back cover off
at the actuator switch assemblies.

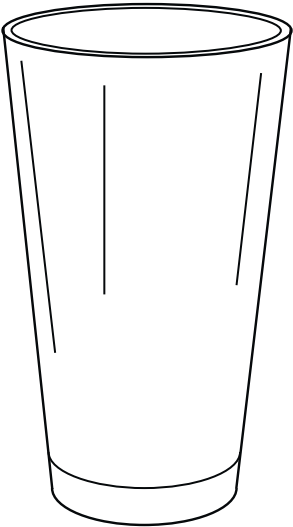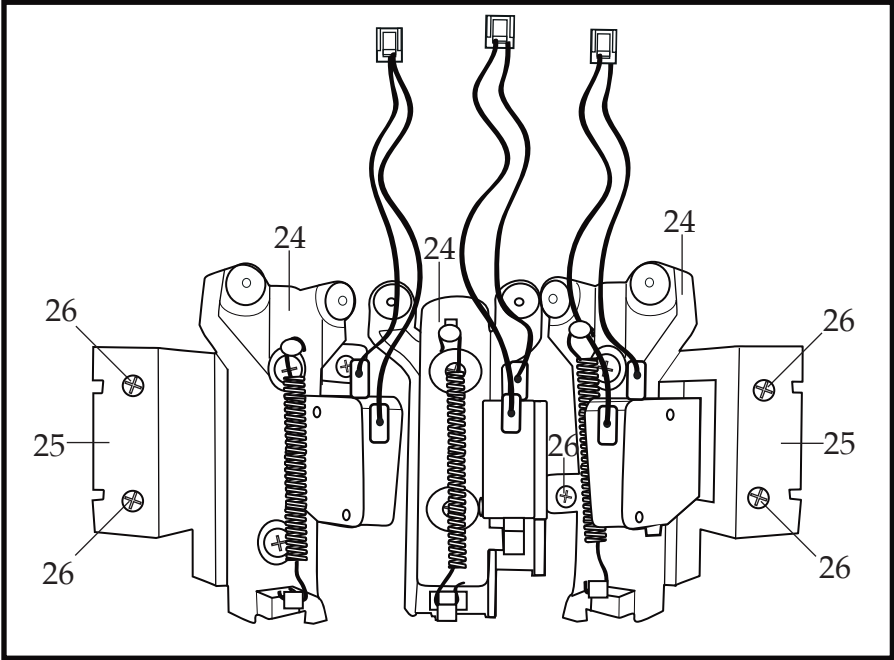

030883
Container

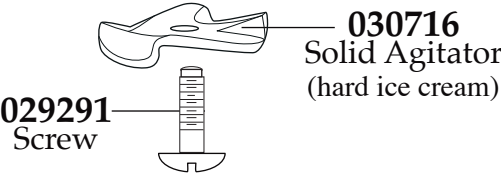

030716
Solid Agitator
(hard ice cream)

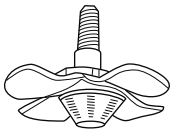

029292
Butterfly Agitator
(soft ice cream)

Looking into unit with back
cover off at Cup Support Locking Assemblies.

